

Aruba Mobility Master



Licensing Guide

Copyright Information

© Copyright 2017 Hewlett Packard Enterprise Development LP.

Open Source Code

This product includes code licensed under the GNU General Public License, the GNU Lesser General Public License, and/or certain other open source licenses. A complete machine-readable copy of the source code corresponding to such code is available upon request. This offer is valid to anyone in receipt of this information and shall expire three years following the date of the final distribution of this product version by Hewlett Packard Enterprise Company. To obtain such source code, send a check or money order in the amount of US \$10.00 to:

Hewlett Packard Enterprise Company
Attn: General Counsel
3000 Hanover Street
Palo Alto, CA 94304
USA

Contents	3
Contacting Support	4
Revision History	5
Mobility Master Software Licenses	6
Getting Started with ArubaOS Licenses	6
Centralized Licensing Overview	6
License Types and Usage	11
Licensing Best Practices and Limitations	13
Licensing Pools	15
Licensing Pools Overview	15
Creating and Managing Licensing Pools	17
License Installation	21
Adding a License in a Mobility Master Deployment	21
Adding a License to a Stand-Alone Controller	24
Removing a License	26

Contacting Support

Table 1: *Contact Information*

Main Site	arubanetworks.com
Support Site	support.arubanetworks.com
Airheads Social Forums and Knowledge Base	community.arubanetworks.com
North American Telephone	1-800-943-4526 (Toll Free) 1-408-754-1200
International Telephone	arubanetworks.com/support-services/contact-support/
Software Licensing Site	hpe.com/networking/support
End-of-life Information	arubanetworks.com/support-services/end-of-life/
Security Incident Response Team	Site: arubanetworks.com/support-services/security-bulletins/ Email: sirt@arubanetworks.com

Revision History

The following table lists the revisions of this document.

Table 2: *Revision History*

Revision	Change Description
Revision 03	Updated the MM license information in the table Usage per License Type on page 11 .
Revision 02	Updated to reflect new licenses and changes to the licensing CLI commands in ArubaOS 8.0.1, as well as changes to the HPE Aruba licensing website WebUI.
Revision 01	Initial release.

ArubaOS supports a variety of optional add-on licenses that enhance the base OS and provide advanced features including as wireless intrusion protection, advanced cryptography, policy-based traffic management and controls, web content classification, and stateful user firewalls.

Getting Started with ArubaOS Licenses

This chapter describes ArubaOS license types and licensing features and lists the procedures to configure a licensing solution.

Learn more about Licenses and Licensing Features

Select any of the links below to view detailed information about ArubaOS license types, licensing features and examples of deployment topologies that support these features.

- [License Types and Usage on page 11](#)
- [Centralized Licensing Overview on page 6](#)
- [Licensing Pools on page 15](#)
- [Licensing Best Practices and Limitations on page 13](#)

Configure a Licensing Management Solution

The following sections describe the procedures to configure centralized licensing clusters and licensing pools, and to add, remove, and monitor individual licenses.

- [Creating and Managing Licensing Pools on page 17](#)
- [License Installation on page 21](#)
- [Adding a License to a Stand-Alone Controller on page 24](#)
- [Removing a License on page 26](#)

Centralized Licensing Overview

ArubaOS supports a centralized licensing architecture, which allows a group of managed devices to share a pool of licenses. A primary and backup Mobility Master can share a single set of licenses, eliminating the need for a redundant license set on the backup server. Managed Devices maintain information sent from Mobility Master, even if the managed device and Mobility Master can no longer communicate.

This overview describes the following features of ArubaOS licensing:

- [Supported Topologies on page 7](#)
- [License Pools on page 7](#)
- [Mobility Master Redundancy on page 8](#)
- [Communication Between the License Server and License Clients on page 9](#)
- [Failover Behaviors on page 10](#)

Supported Topologies

ArubaOS 8.x supports centralized licensing in two different topologies; a topology where a Mobility Master can act as a licensing server to all its associated managed devices, and a topology where a stand alone controller can act as a licensing server to other stand alone controllers.

ArubaOS 8.x does *not* support a centralized licensing topology where Mobility Master acts as a licensing server to both its associated managed devices and stand alone. This is a change from previous versions of ArubaOS 6.x, where a master controller could act as a licensing server to both its local controllers and stand alone controllers,

License Pools


Mobility Master uses licensing pools to distribute licenses to a large number of managed devices across geographic locations. By default, all managed devices associated to Mobility Master share a single global pool of all the sharable licenses added to that Mobility Master. However, ArubaOS also allows you to create additional licensing pools at a configuration node, allowing a groups of managed devices at or below that configuration level to share licenses among themselves, but not with other groups.



The following example shows how licenses can be allocated within one or more license pools. The following examples use only AP licenses for simplicity, but the same methodology applies to all sharable licenses. For more information and additional examples for licensing pool types, see [Licensing Pools on page 15](#)

If you create a license pool for the configuration node **/USA**, as shown in [Figure 1](#), the four managed devices below this node use licenses from the **/USA** pool, while the other managed devices continue to use the global pool. If the **/USA** license pool is allocated 40 of the 100 AP licenses installed on Mobility Master, the four managed devices using the **/USA** pool can share 40 AP licenses from Mobility Master. The global license pool now contains only 60 of the AP licenses from Mobility Master.

Figure 1 Managed Nodes Use Global or Custom License Pools

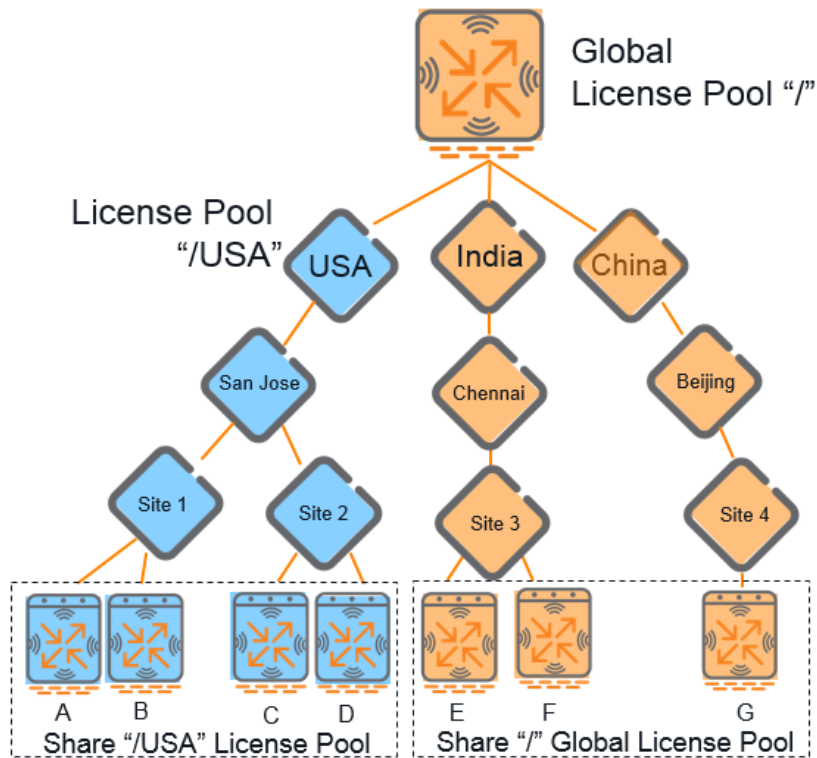

Mobility Master Redundancy

A primary and backup Mobility Master connected on the same broadcast domain using the Virtual Router Redundancy Protocol (VRRP) can share a single set of licenses. Managed devices on the network connect to Mobility Master using the VRRP virtual IP address configured for that set of redundant servers. The primary Mobility Master uses the configured virtual IP address by default. However, if the primary Mobility Master becomes unavailable, the secondary Mobility Master will take ownership of the virtual IP address, allowing managed devices to retain seamless connectivity to a Mobility Master device.



Only one backup Mobility Master can be defined for each primary Mobility Master.


To configure the automatic database synchronization period between the primary and backup Mobility Master, access the mobility master node hierarchy via the command-line interface and issue the command **database synchronized period <time-interval>**.

For example,

```
(host) [mynode] (config) #change-config-node mm
(host) [mm] (config) #database synchronize period 25
```

The example below shows a primary and backup license server connected using VRRP. Licenses must be installed on the primary Mobility Master, but are shared between that redundant pair. If the primary Mobility Master had 32 AP licenses, 32 PEFNG licenses, and 32 xSec licenses installed, both Mobility Masters would share a combined global pool of 32 AP, 32 PEFNG, and 32 xSec licenses. By default, any managed devices connected to this pair of redundant servers use licenses from this shared license pool.

Figure 2 Shared Licenses on a Primary and Backup Mobility Master

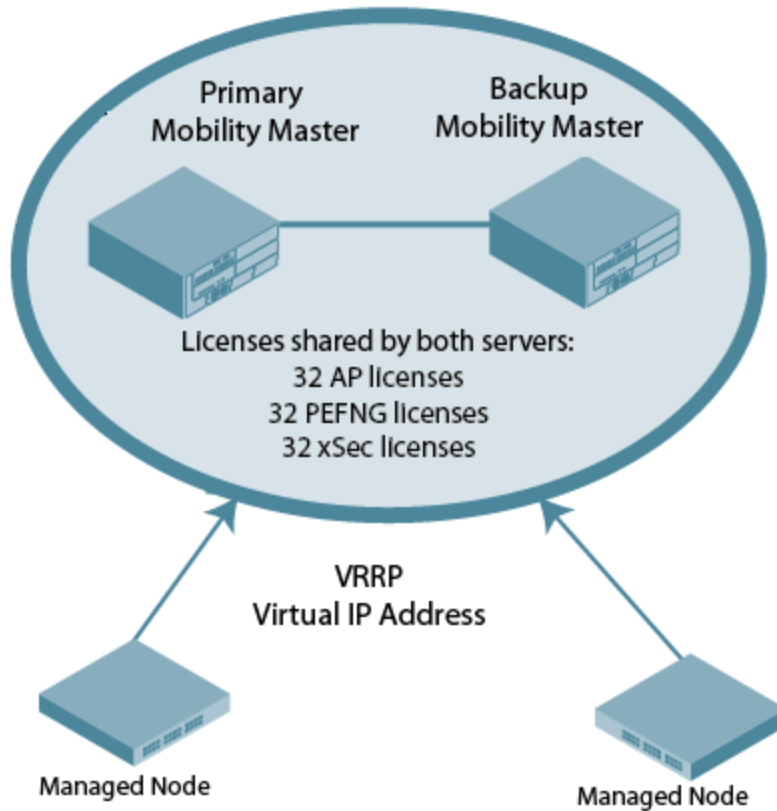

Communication Between the License Server and License Clients

The sharable licenses for all managed devices associated with a Mobility Master are managed through the Mobility Master license table. The information in this table is then shared with all managed devices as a pool of available licenses. When a managed device uses a license in the available pool, it communicates this change to the Mobility Master, which updates the license pool information, and sends the updated information to the managed devices.

If a controller had previously installed sharable licenses before it was added to a Mobility Master as a managed device, those licenses are no longer usable on a managed device. These license keys must be added to the Mobility Master and then Mobility Master WebUI and then assign them to the Managed node.

Those license keys must be regenerated and associated with to a managed device or licensing pool using the Mobility Master WebUI.

When a new AP associates with managed devices, the managed devices sends updated licensing information to Mobility Master. Mobility Master then recalculates the available total for that pool, and sends the revised license count back to the managed devices. If a managed device uses an AP license from the license pool, it also consumes a PEFNG and a RFProtect license from the pool, even if that AP has not enabled any features that would require that license. A managed device cannot use more licenses than what is supported by its controller platform, regardless of how many licenses are available in the license pool.

Multi-Version Licensing

ArubaOS supports multi-version licensing, which allows a managed device to run a different version of ArubaOS 6.x and 8.x software than the primary (and backup) Mobility Master. If a license is introduced in a newer version of ArubaOS, Mobility Master can still distribute licenses to licensing clients running an older version of ArubaOS, even if the managed device does not recognize the newer license type.



In Mobility Master Redundancy, the standby Mobility Master becomes the standby license server. You must enable database synchronization on both active and standby Mobility Masters for the license database to synchronize.

Failover Behaviors

Managed devices can continue to operate as usual in the event that a managed device fails to contact the Mobility Master. The following sections describe failover behaviors.

Mobility Master Fails Over to a Backup Mobility Master

If the primary Mobility Master fails, the backup Mobility Master will retain the shared license limits until the backup Mobility Master reboots. If both the primary and the backup Mobility Master fail, or if the backup Mobility Master reboots before the primary Mobility Master comes back up, managed devices will retain the license limits sent to them by Mobility Master for 30 days.



Although a managed device retains its licensing information for 30 days after it loses contact with the Mobility Master, if the managed device reboots at any time during this 30-day window, the window will restart, and the managed device will retain its information for another 30 days.

Mobility Master Must be Replaced

If you need to replace a stand-alone Mobility Master, the keys installed on the previous Mobility Master must be regenerated and added to the new Mobility Master. You do not need to reinstall keys on Mobility Master if it is using a redundancy solution with a backup Mobility Master, as the replacement Mobility Master will synchronize its licensing database with the backup Mobility Master once the replacement Mobility Master comes back online.

Mobility Master is Unreachable

If a managed device does not receive three consecutive heartbeats from the Mobility Master, it assumes that Mobility Master is down, but continues to use the licenses it received from its Mobility Master license pool. When a managed device is unable to reach a license server for 30 consecutive days, it removes any shared licenses pushed to it from Mobility Master. If the 30-day window has passed and the managed device does not have enough installed licenses for all of its associated APs, the managed device will nonetheless continue to support each AP. However, when an AP reboots and its managed device does not have enough licenses, that AP will not come up.



For more information on replacing a managed device, see *the ArubaOS 8.0.0.0 User Guide*.

A Managed Device is Unreachable

Mobility Master sends keepalive heartbeats between the license server and the licensing client controllers every 30 seconds. If Mobility Master fails to receive three consecutive heartbeats from a client, it assumes that the licensing client is down, and that any APs associated with that client are also down or have failed over to another controller. Therefore, Mobility Master adds any licenses used by that client back into the available pool of licenses.



The WebUI of the licensing client and Mobility Master display a warning message when a licensing client and Mobility Master are unable to communicate.

An AP Fails Over to Another Licensing Client

If an AP fails over from one client controller to another, the AP will be allowed to come up even if there aren't sufficient licenses present on the backup controller. APs continue to stay active until they reboot; however, if

there are not sufficient available licenses to bring up an AP after it reboots, that AP will not become active.

License Types and Usage

Licenses are platform independent and can be installed on any controller. Installation of the feature license unlocks that feature's functionality for the maximum capacity of the controller. [Table 3](#) lists the license types and describes how licenses are consumed on the controllers.

Table 3: Usage per License Type

License	Usage Basis	What Consumes One License
AP	AP	An AP license is required for each operational LAN-connected, mesh, or remote AP that is advertising at least one BSSID (virtual-AP).
ACR	Client Session	This license enables ArubaOS Advanced Cryptography (ACR) features. A license is required for each active client termination using Suite-B algorithms or protocols.
PEF	AP	One operational AP using one or more Policy Enforcement Firewall (PEF) features, such as intelligent application identification, policy-based traffic management and controls, or stateful user firewalls. NOTE: The PEF license was called PEF-NG in some previous versions of ArubaOS.
PEFV	Controller	The PEFV license allows a network administrator to apply firewall policies to clients using a VPN to connect to the controller. This license is mandatory for the Aruba VIA VPN client, but optional for all other VPN clients. The PEFV license is purchased as a single license that enables the functionality up to the full user capacity of the controller.
RFprotect	AP	An RFProtect (RFP) license is required for each operational AP using one or more RF Protect features, such as spectrum analysis and Wireless Intrusion Protection (WIP).
MM	Associated device (Controller/AP)	Starting with ArubaOS 8.0.1, the MM license is required to terminate devices (controllers or APs) on Mobility Master. If the Mobility Master does not have sufficient MM licenses and an AP fails to obtain a license, that AP can get an IP address and connect to its controller, but will not broadcast an SSID.
VMC	AP	Starting with ArubaOS 8.0.1, the VMC license is a sharable license required to terminate APs on a virtual controller. In ArubaOS 8.0.0, the VMC-TACT and VMC-TACT8 licenses are non-sharable licenses that must be installed on a virtual machine before you can install ArubaOS as a controller on that VM.
WebCC	AP	The Web Content Classification (WebCC) license is a subscription-based, per-AP license that supports Web content classification features on an AP for the duration of the subscription period (up to 10 years per license).

Sharable vs Controller-Specific Licenses

Many licenses are consumed on a per-AP, or per-user basis, and are not unique to any specific hardware device. These sharable license types can be assigned to a licensing pool and used by any device within a group of managed devices. A non-sharable license is generated using a controller serial number, and can only be used by the individual controller for which it was generated. Both sharable and non-sharable licenses are installed using Mobility Master, allowing network administrators with root-level access to remotely add licenses to any licensing pool or managed devices on the network. For more information on adding a license to a remote managed device, see [License Installation on page 21](#).

Table 4: Sharable Licenses vs Controller-Specific Licenses

Sharable via a Licensing Pool	Controller-Specific License
AP	PEFV
ACR	
PEF	
RF Protect	
xSec	
VMC	
MM	
WebCC	

Evaluation vs Permanent Licenses

Each license can be either an evaluation or permanent license. A permanent license permanently enables the desired software module on a specific Aruba controller. You obtain permanent licenses through the sales order process only. Permanent software license keys are sent to you via email.

An evaluation license allows you to evaluate the unrestricted functionality of a software module on a specific controller for 90 days (in three 30-day increments). Evaluation licenses are added to Mobility Master and made sharable within a licensing pool. An expired evaluation license will remain in the license database until the controller is reset using the command **write erase all**, where all license keys are removed. An expired evaluation license has no impact on the normal operation of the controller, but it is kept in the license database to prevent abuse.

To determine your remaining time on an evaluation license, select the Alert flag (🚩) in the WebUI titlebar. The WebUI displays information about evaluation license status. When an evaluation period expires:

- The controller automatically backs up the startup configuration and reboots itself at midnight (according to the system clock).
- All permanent licenses are unaffected. The expired evaluation license feature is no longer available and is displayed as **Expired** in the WebUI.

Perpetual vs Subscription Licenses

A perpetual license is a purchased license that has no end date; once installed, it does not expire. Most purchased licenses are perpetual licenses. The Web Content and Classification (WebCC) license is a subscription license that enables WebCC features only for the duration of the subscription (1,3,5,7 or 10 years). The subscription time period starts from the time license key is generated from the licensing Web site. Thirty days before the license period expires, an alert appears in the banner in the Mobility Master WebUI, warning the user that the license is ready to expire. After the license expiration date is passed, the license continues to operate as an active license for an extended grace period of 120 days. After this final grace period elapses, the license permanently expires.



Subscription licenses cannot be renewed. Once a license subscription expires, a new license subscription key must be generated and installed on Mobility Master.

Starting with ArubaOS 8.0.1, if one or more subscription WebCC licenses expire so that a controller has fewer active WebCC subscription licenses than AP licenses, that controller will no longer be able to download WebCC updates from the cloud or perform classification using cloud lookup. The APs associated to that device, can, however, continue to use the cached WebCC data currently on the controller. This is a change from ArubaOS 8.0.0, where an expired WebCC license did not impact AP or controller behavior.

Licensing Best Practices and Limitations

The following best practices and limitations apply to ArubaOS licenses:

- New licenses can only be associated to a managed device via the Mobility Master WebUI or command-line interfaces. Licenses cannot be added directly to a managed device.
- If a controller had previously installed sharable licenses before it was added to Mobility Master as a managed device, those licenses are no longer usable on a managed device. Those license keys must be regenerated, added to Mobility Master, and assigned to the managed device or licensing pool using the Mobility Master WebUI.
- When allocating licenses, allow for the maximum quantity of licenses required at any given time. A common estimate when calculating user licenses is 20 users per AP. Do not forget to consider occasional large assemblies or gatherings.
- Before you upgrade or make database changes to Mobility Master, back up its configuration (**backup flash**) and its license database (**license export filename.db**).
- Rebooting, resetting, or issuing the **write erase** command on Mobility Master does not affect its license key management database. However, issuing the **write erase all** command resets the device to a factory default state and deletes all databases, including the license key management database. If you reset Mobility Master to its factory default state, you must reinstall all previously-installed license keys.
- Abnormal tampering of the Mobility Master or managed device system clock can disable evaluation licenses on that device. This can disable the features supported by this license, and affect network services.
- The Advanced Cryptography (ACR) license includes the following caveats:
 - On a platform that supports 2048 IPsec tunnels, the maximum number of Suite B IPsec tunnels supported is 2048, even if a larger capacity license is installed.
 - ACR licenses are cumulative. For example, if you want to support 2048 Suite B connections, you can install two ACR licenses that support 1024 connections each.
 - If your Mobility Master or managed device uses an ACR license that allows fewer IPsec tunnels that is supported by that device platform, that device can still support IPsec tunnels using non-Suite B modes (for example, AES-CBC), up to the platform maximum.

- The ACR license allows Mobility Master or a managed device to use both IPsec Suite B and 802.11i Suite B connections simultaneously. The combined number of these sessions may not exceed the ACR license maximum.
- A single client using both 802.11i Suite B and IPsec Suite B connections will simultaneously consume two ACR licenses.



ArubaOS provides the ability to move a license from one stand-alone controller to another, for maximum flexibility in managing an organization's network and to minimize an RMA impact. Aruba monitors and detects license fraud. Abnormally high volumes of license transfers for the same license certificate to multiple devices can indicate a breach of the Aruba end user software license agreement and will be investigated.

Licensing Pools Overview

By default, all managed devices associated to the same Mobility Master share a global pool of licenses that includes all the sharable licenses added to the Mobility Master. However, ArubaOS also allows you to create individual licensing pools at a configuration node, allowing managed devices below that node to share licenses amongst themselves but not with other managed devices.

Licensing Pool Topologies

The following examples show how licenses can be allocated within one or more license pools. These examples use only AP licenses for simplicity, but the same methodology applies to all sharable licenses.



For more information on licensing pool configuration, see [Creating and Managing Licensing Pools on page 17](#)

Topology 1: Global Pool Only

In the topology shown in [Figure 3](#), all seven managed devices are part of the default "/" global license pool defined at the Mobility Master configuration root. The licenses installed on Mobility Master are all sharable between the managed devices using this global license pool. For example, if there are 100 AP licenses installed on the Mobility Master, all managed devices share the global pool of 100 AP licenses.

Figure 3 All Controllers Use the Global License Pool

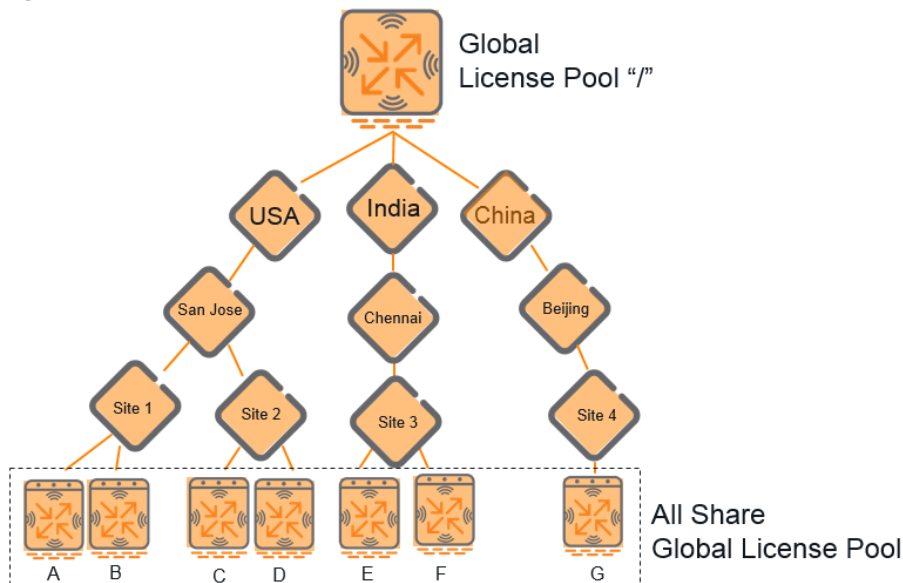


Table 5: License Pool Allocation for Topology 1

Pool Name	Licenses from Mobility Master
/ (Global pool)	100

Topology 2: Global and Custom Pools

If you create a license pool for the configuration node **/USA**, as shown in [Figure 4](#), the four managed devices below this node use licenses from the **/USA** pool, while the other managed devices continue to use the global pool. In the previous example, all managed devices shared a single pool of 100 licenses. If the **/USA** license pool is allocated 40 of the 100 AP licenses installed on Mobility Master, the four managed devices using the **/USA** pool can share 40 AP licenses from Mobility Master. The global license pool now contains only 60 of the AP licenses from the Mobility Master.

Figure 4 Controllers Use Global or Custom License Pools

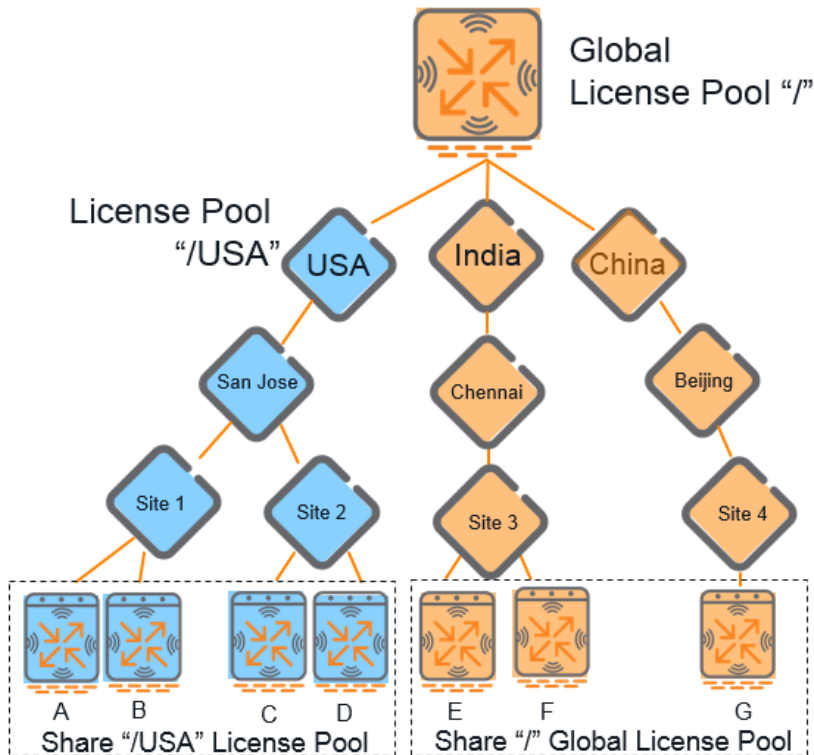



Table 6: License Pool Allocation for Topology 2

Pool Name	AP Licenses from Mobility Master
/ (Global pool)	60
/USA	40

Topology 3: All Custom Pools

If you create a separate license pool for each second-level configuration node, as shown in [Figure 5](#), none of the managed devices is associated with the global license pool. All licenses installed on Mobility Master must be allocated to one of the three pools (**/USA**, **/India** or **/China**), or those licenses will not be used.

Figure 5 All Controllers Use a Custom License Pool

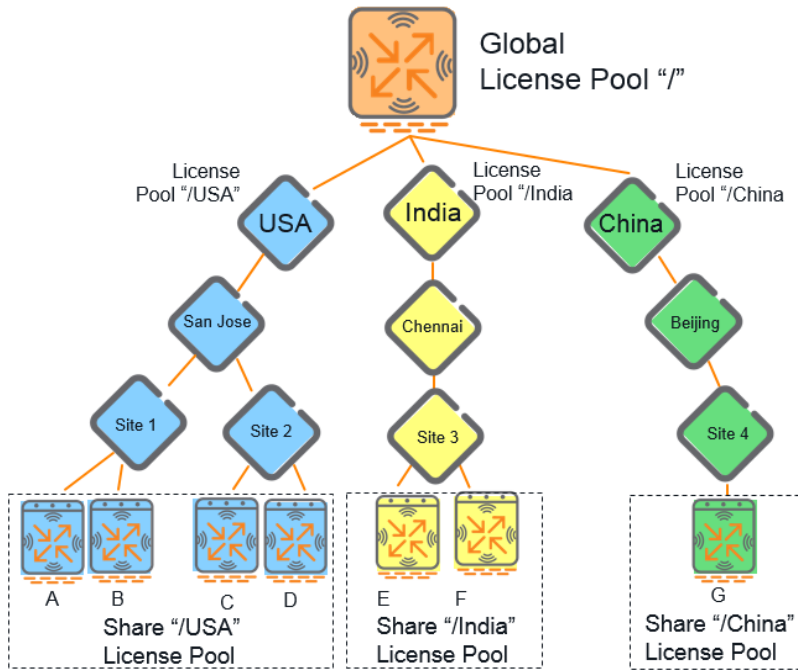

If 40 of the 100 AP licenses installed on the Mobility Master are allocated to the **/USA** pool, 35 AP licenses are allocated to the **/India** pool, and 25 AP licenses are allocated to the **/China** pool, the licenses available to the managed devices within each pool will vary, as shown in [Table 7](#).

Table 7: License Pool Allocation for Topology 3

Pool Name	AP Licenses from Mobility Master
/ (Global pool)	0
/USA	40
/India	35
/China	25

Creating and Managing Licensing Pools



Starting with ArubaOS 8.0.1, centralized licensing is supported on standalone controllers, and is enabled by default. Standalone controllers running ArubaOS 8.0.0 require that licenses are directly to that individual controller using the **license add** command.

Before you Begin

If your network includes a controller running an earlier version of ArubaOS that supported the installation of licenses directly on that device, make a note of the licenses installed on that legacy device before you upgrade to ArubaOS 8.0 or later. If you add that controller as a managed device under a Mobility Master, those locally installed licenses will become inactive and you will need to regenerate those keys and reinstall them via the Mobility Master.

This section contains the following information:

- [Adding a Sharable License to the Global License Pool on page 18](#)
- [Creating and Managing a Local License pool on page 18](#)
- [Adding an Individual \(non-Sharable\) license to a Managed Device on page 20](#)

Adding a Sharable License to the Global License Pool

The following steps describe the procedure to add a sharable license to the global licensing pool on a Mobility Master.



When adding a license, you must enable the global licensing pool in the WebUI, or issue the **licensing-pool-profile-root** command to enable licensing features using the command-line interface before that license can be used. For more information on the specific commands to enable individual license types, see [Creating and Managing a Local License pool on page 18](#).

Using the WebUI

To add a license via the Mobility Master WebUI:

1. In the **Mobility Master** node hierarchy, navigate to **Configuration > System > Licensing**.
2. Click the **Mobility Master Licenses** subtab.
3. Click + below the **Key** table. The **Install Licenses** window appears.
4. In the **Install Licenses** window, enter the license key for one or more licenses. Each license key must be on a separate line.
5. Click **OK**.
6. Click **Apply**.
7. Click **Pending Changes**.
8. In the **Pending Changes** window, select the check box and click **Deploy changes**.

Using the CLI

From any configuration node, issue the command **license add <key>**.

Example:

```
(host) [mynode] (config) #license add lnZSpC2vkLMlJw8KVYdgj2
```

Creating and Managing a Local License pool

When you add a local license pool to a configuration node, those licenses in that local pool are reserved for that configuration node, and usable only for managed devices at or below the level of configuration.



For an overview of global and local license pool usage, see [Licensing Pools Overview on page 15](#).

Using the WebUI

1. In the **Mobility Master** node hierarchy, navigate to **Configuration > System > Licensing**.
2. Select the **Usage** sub-tab. The **License Usage** table appears, showing the numbers of licenses currently used for each Mobility Master configuration node.
3. Select the configuration node for which you want to create a local license pool.
4. Select **Enable Local License Pool**. Another table appears below the **License Usage** table, showing the numbers of sharable licenses currently allocated to that license pool. If this is the first time you have

enabled a local license pool on this configuration node, this table shows zero allocated licenses for all license types.

- Click the allocated licenses value for any license type to change the number of licenses in that license pool. The **Allocate Licenses** window opens, displaying the number of available licenses that are free to be allocated to a local pool.
- Enter the number of permanent and/or evaluation licenses to be added to the selected pool, then click **Done**.
- Repeat steps 6-7 as required to allocate licenses for other license types.

Figure 6 Allocating Licenses for a Global License Pool

Usage	Mobility Master Licenses		Controller Licenses				
	AP	PEF	RF Protect	ACR	WebCC	MM	VMC
⊖ Global License Pool	5/10240	5/10240	0/0	0/0	5/10240	8/500	0/0
⊖ GLOBAL	0	0	0	0	0	0	0
⊕ INDIA	0	0	0	0	0	0	0

Allocate Licenses

LICENSE TYPE	LICENSE KEY	EXPIRATION DATE	TOTAL	AVAILABLE	ALLOCATE TO THIS POOL
Perm	B7FbLtSI-O+7TcobL-K6Wm...	--	10240	10240	<input type="text" value="240"/>
Totals			10240	10240	0

License Pool For							
Enable local license pool:	<input checked="" type="checkbox"/>						
	AP	PEF	RF Protect	ACR	WebCC	MM	VMC
Scope	Per-AP	Per-AP	Per-AP	Per-Session	Per-AP	Per-Device	Per-Device
Allocated Licenses	0	0	0	0	0	0	0

- Click **Apply**.
- Click **Pending Changes**.
- In the **Pending Changes** window, select the check box and click **Deploy changes**.



Starting with ArubaOS 8.0.1, the Global License Pool table displays license usage statistics for each configuration pool, as well as the license usage for the devices associated to those license pools. In ArubaOS 8.0.0, the Global license pool table does not display license usage data at the device level.

Using the CLI

Navigate to the configuration node for which you want to add a local configuration pool, and issue the following command:

```
license-pool-profile <node-path> [acr-licenses {eval key <key> <num>}|<num>} [ap-licenses {eval key <key> <num>}|<num>} [mm-license {eval key <key> <num>}|<num>} [pefng-licenses {eval key <key> <num>}|<num>} [rfp-licenses {eval key <key> <num>}|<num>} [webcc-licenses {eval key <key> <num>}|<num>} [subscript key <key> <num>}] [xsc-licenses [{eval key <key> <num>}|<num>}]
```

Example:

```
(host) [mm] (config) #license-pool-profile /group/config
(host) [mm] (License pool profile "/group/config") #ap-licenses 64
```

After you create the license pool, you must issue the `license-pool-profile-root` command to enable shared license features within the global licensing pool.

```
(host) [mm] (config) #license-pool-profile-root
(host) [mm] (License root(/) pool profile) #acr-license-enable
```



The AP, Mobility Master (MM), virtual mobility controller (VMC) licenses are automatically for their specific device type. These licenses do not need to be enabled within the global licensing pool.

Adding an Individual (non-Sharable) license to a Managed Device

Non-sharable licenses are generated using the serial number of a specific device, and can only be assigned to the device for which they were created. A non-sharable license is associated to an individual managed device using the Mobility Master WebUI or command-line interfaces.

Using the WebUI

To add a license via the Mobility Master WebUI:

1. In the **Mobility Master** node hierarchy, navigate to **Configuration > System > Licensing**.
2. Select the **Controller Licenses** subtab.
3. Select the managed device to which you want to add a license.
4. The **Licenses** table appears, showing the licenses currently associated to that device.
5. Click + below the **Licenses** table.
6. Enter the serial number for one or more licenses. Each license key must be on a separate line.
7. Click **OK**.
8. Click **Apply**.
9. Click **Pending Changes**.
10. In the **Pending Changes** window, select the check box and click **Deploy changes**.

Using the CLI

Navigate to the configuration for the managed device for which you want to add a license, then issue the command `license add <key>`.

Example:

```
(host) [group/node/managed-node-14]#license add lnZSpC2vkLMlJw8KVYdgj2
```

Adding a License in a Mobility Master Deployment

Starting in ArubaOS 8.0, the only way to install a license in a Mobility Master deployment is to install that device on Mobility Master, and then associate that license to either a specific managed device, or a shared pool of licenses. Licenses cannot be added directly to a managed device via the managed device's UI.

Before you can use the Aruba Software License Management Web site to generate licenses for Mobility Master and your managed devices, you must obtain the following:

- A License Certificate ID, which you can request from your sales account manager or authorized reseller
- The auto-generated ArubaOS passphrase for Mobility Master
- The auto-generated ArubaOS passphrase for any managed device installed on a server VM (virtual controller)
- The serial numbers of your physical controllers
- Access to the HPE Aruba licensing Web site at <https://hpe.com/networking/support>

Starting with ArubaOS 8.0.1, a VM serial number is not required to generate a Mobility Master (VMM) or virtual mobility controller (VMC) license. This is a change from ArubaOS 8.0.0, as the licensing website *does* require a serial number to generate a Mobility Master (VMM) or virtual mobility controller (VMC) license for a Mobility Master or virtual managed device running ArubaOS 8.0.0. This serial number is obtained by your Aruba reseller and configured via the command **product serial-number <serial-number>**.



Step 1: Identify the Mobility Master Passphrase

Use the Mobility Master passphrase in the licensing website to generate a Mobility Master (MM) license, or to generate a sharable license that can be added to Mobility Master license pools.

- To identify the Mobility Master passphrase, access Mobility Master via the command-line interface and issue the command **show license passphrase**.
- *(For Mobility Master devices running ArubaOS 8.0.0 only):* To identify the Mobility Master serial number, access Mobility Master via the command-line interface and issue the command **show inventory**.

Step 2: Identify the Serial Number or Passphrase for your Managed Devices

Each managed device has a unique identifier that you can use to create a non-sharable, device-specific license for that managed device. A physical controller uses a serial number, and a virtual controller installed on a server VM uses an auto-generated VM passphrase.

- To identify the serial number for a physical managed device, access that managed device via the command-line interface and issue the command **show inventory**.
- To identify the VM passphrase for a virtual controller installed on a server VM, access that managed device via the command-line interface and issue the command **show license passphrase**.

Step 3: Enable Sharable Licensing Features

You must enable Mobility Master to support sharable ArubaOS licenses by enabling each licensing feature type via the Mobility Master WebUI or command-line interfaces. Enabling a licensing feature in Mobility Master activates all licenses of that type in all licensing pools, allowing managed devices to use that licensing feature.



Best practices is to perform this step before you install your sharable licenses. Installed sharable licenses will not become active until these license features are enabled.

Enabling Sharable License Features Using the WebUI

To enable a sharable license via the Mobility Master WebUI:

1. In the **Mobility Master** node hierarchy, navigate to **Configuration > System > Licensing**.
2. Select the **Usage** sub-tab. The **Global License Pool** and **Usage for Global License Pool** tables appear.
3. In the **Usage for Global License Pool** table, click the check box by each license type to enable features supported by those licenses.



The AP, Mobility Master (MM), virtual mobility controller (VMC) licenses are automatically for their specific device type. These licenses do not need to be enabled within the global licensing pool.

Enabling Sharable License Features Using the CLI

Access the Mobility Master command-line interface in config mode and execute the following command:

```
(host) [mm] (config) # license-pool-profile-root acr-feature-enable|pefng-feature-enable|rfp-feature-enable|webcc-feature-enable
```

Step 4: Create a License Key

The procedures to create a license key vary, depending upon the license type. Sharable licenses and, the license required to install Mobility Master on a server VM must be generated using the Mobility Master passphrase. Device-specific licenses for physical Aruba controllers are generated using the serial number for that controller. Device-specific licenses for virtual controllers installed on a server VM are generated using the passphrase for that virtual managed device.

Use the following procedure to create a license key via the HPE Aruba License Management Website.

1. From the HPE Aruba License Management website, select **Register License** from the navigation menu.
2. In the **Order number or Registration ID/Certificate ID** field, enter the certificate ID(s) you received from your Aruba sales representative or reseller, then click **Next**.
3. Enter the required information to identify the device that will use the license. This can be the device MAC address, serial number or IP address, depending upon the device or license type.



(For ArubaOS 8.0.0 only) If you are creating a sharable or MM license key for an ArubaOS 8.0.0 Mobility Master, you must also enter the Mobility Master serial number

4. Click **Next** to display the licensing agreement.
5. Select **I accept all of the above terms** to accept the license agreement, then click **Finish** to display a table of license products for that order.
6. In the product order table, select the product name for the license you want to activate.
7. In the **Redeem** field, enter the number of available licenses you would like to redeem for that product, from one license to the maximum quantity available.
8. Click **Next** to display the confirmation page. This page displays transaction details and includes options to download the license key or have the key sent to a specified email address.
9. *(Optional)* Click **Register More** to return to the **Register License** navigation menu, or select **Register More for this order** to return to the product order table for the previous order and activate additional licenses for that order.

Step 5: Install the Licenses

Use the Mobility Master WebUI and command-line interfaces to add sharable license keys to the global licensing pool, or to assign a non-sharable license to a specific managed device.

After you receive the email with your license key, use the following procedure to add a sharable license key to the global licensing pool on Mobility Master.

Adding a Sharable License Using the WebUI

To add a sharable license via the Mobility Master WebUI:

1. In the **Mobility Master** node hierarchy, navigate to **Configuration > System > Licensing**.
2. Select the **Mobility Master Licenses** subtab. The **Key** table appears.
3. Click + below the **Key** table. The **Install Licenses** window appears.
4. In the **Install Licenses** window, enter the serial number for one or more licenses. Each license key must be on a separate line.
5. Click **OK**.
6. Click **Apply**.
7. Click **Pending Changes**.
8. In the **Pending Changes** window, select the check box and click **Deploy changes**.

The **Key** table displays detailed information about the licenses added to Mobility Master, including the license type and count, expiration date (if applicable) and current status (active or expired).

Adding a Device-Specific License Using the WebUI

Use the following procedure to add a MM license or any another device-specific license via the Mobility Master WebUI:

1. In the **Mobility Master** node hierarchy, navigate to **Configuration > System > Licensing**.
2. Select the **Controller Licenses** sub-tab. The **Controller Licenses** table appears.
3. Expand the **Root** menu in the **Controller Licenses** table to select the device or Mobility Master server on which you want to install the device-specific license. The license table for the selected device appears below the **Controller Licenses** table.
4. Click + below the device licenses table. The **Install Licenses** window appears.
5. In the **Install Licenses** window, enter the serial number for one or more licenses. Each license key must be on a separate line.
6. Click **OK**.
7. Click **Pending Changes**.
8. In the **Pending Changes** window, select the check box and click **Deploy changes**.

Adding a Sharable License Using the CLI

From any configuration node, execute the command **license add <key>**.

Example:

```
(host) [mynode] #license add lnZSpC2vkLM1Jw8KVYdgj2
```

Adding a Device-Specific License Using the CLI

To add a device-specific license (such as a PEF-V license) in ArubaOS 8.0.1 and later, navigate to the Mobility Master (mm) configuration node and issue the command **license remote remote-ip-addr <addr> add <key>**, where <remote-ip-addr> is the address of the managed device to which you are adding the license.

For example:

```
(host) [mm] #license remote remote-ip-addr 192.0.2.14 add lnZSpC2vkLMLJw8KVYdgj2
```



In ArubaOS 8.0.0, the command to add a license is **license remote ip-addr <ip-addr> add <key>**. The **remote-ip-addr** parameter was introduced to this command in ArubaOS 8.0.1.

Adding a License to a Stand-Alone Controller

You can use the Aruba Software License Management website to generate all the licenses for a stand-alone master controller, or associate a stand-alone controller to an external licensing server.

Associating a Stand-Alone Controller to an External License Server

If you associate a stand-alone controller to an external license server, the controller can obtain licenses from a license pool on that external server.

Using the WebUI

1. From the Mobility Controller configuration node, navigate to the **Configuration > System > Licensing** page of the WebUI.
2. Enable the connect to **external license server** option.
3. Enter the IP address of the external license server.
4. Click **Submit** to save your changes.

Figure 7 Associating a Stand-Alone Controller to an External License Server

Connect to external license server: IP address:

Usage

Usage Summary	Usage by This Controller		Usage by Other Controller		
	AP	PEF	RF Protect	ACR	WebCC
Feature Enabled	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Via the CLI

To associate a standalone controller with an external license server, issue the command **no license-pool-profile-root** from the Mobility Master (mm) configuration node to remove this profile, then issue the command **license server-ip <ip-addr>** to define the external server.

Adding Licenses directly to the Stand-Alone Controller

Before you can use the Aruba Software License Management website to generate a license for a stand-alone master controller, you must obtain the following:

- A License Certificate ID, which you can request from your sales account manager or authorized reseller.
- The serial number of the Aruba controller.
- Access to the HPE Aruba licensing Web site <https://hpe.com/networking/support>

Step 1: Enable Licensing Features on a Stand-Alone Controller

Enable support for sharable ArubaOS licenses on a stand-alone controller by enabling each licensing feature type via the controller command-line interface. If you are generating a non-sharable license for a specific managed device, you can skip this step, as the licensing features for a multi-controller topology must be enabled via Mobility Master.



Best practices is to perform this step before you install licenses on the controller. Installed licenses will not become active until the license feature is enabled.

Access the command-line interface of the stand-alone controller and execute the following command:

```
(host) [node] (config) # license-pool-profile-root acr-feature-enable|pefng-feature-enable|rfp-feature-enable|webcc-feature-enable.
```

Step 2: Generate the License Key

Use the following procedure to create a license key for a specific controller using the certificate ID, and device serial number.

1. From the HPE Aruba License Management website, select **Register License** from the navigation menu.
2. In the **Order number or Registration ID/Certificate ID** field, enter the certificate ID(s) you received from your Aruba sales representative or reseller, then click **Next**.
3. Enter the required information to identify the device that will use the license. Depending upon the device or license type, this can be the device MAC address, serial number or IP address,



(For ArubaOS 8.0.0 only) If you are creating a sharable or MM license key for an ArubaOS 8.0.0 Mobility Master, you must also enter the Mobility Master serial number

4. Click **Next** to display the licensing agreement.
5. Select **I accept all of the above terms** to accept the license agreement, then click **Finish** to display a table of license products for that order.
6. In the product order table, select the product name for the license you want to activate.
7. In the **Redeem** field, enter the number of available licenses you would like to redeem for that product, from one license to the maximum quantity available.
8. Click **Next** to display the confirmation page. This page displays transaction details and includes options to download the license key or have the key sent to a specified email address.
9. *(Optional)* Click **Register More** to return to the **Register License** navigation menu, or select **Register More for this order** to return to the previous product order table and activate additional licenses for that order.

Step 5: Install the Licenses

After you receive the email with your license key, use the following procedure to add a license key to the stand-alone controller. Licenses for managed devices, even non-sharable, device-specific licenses, must be associated to the managed device via Mobility Master.

Using the WebUI

To add a license via the WebUI of a stand-alone controller:

1. Access the controller WebUI.
2. From the Mobility Controller configuration node, navigate to **Configuration > System > Licensing**.
3. Select the **Inventory** menu. The **Key** table appears.
4. Click + below the **Key** table. The **Install Licenses** window appears.
5. In the **Install Licenses** window, enter the serial number for one or more licenses. Each license key must be on a separate line.
6. Click **OK**.

Using the CLI

From the command-line interface of a stand-alone controller, execute the command **license add <key>**.

Example:

```
(host) [mm] (config) #license add lnZSpC2vkLMlJw8KVYdgj2
```

Removing a License

You can use the WebUI or command-line interfaces to remove a license key from a stand-alone controller or Mobility Master.

Using the WebUI

To remove a sharable license from Mobility Master:

1. In the **Mobility Master** node hierarchy, navigate to **Configuration > System > Licensing**.
2. Click the **MM Licenses** tab. The **Key** table opens.
3. Select the license key you want to delete, then click the delete icon to the right of the highlighted key.

To remove a device-specific license from a managed device:

1. Navigate to the **Configuration > System > Licensing** page .
2. Click the **Managed device Licenses** tab. The **Managed device Licenses** table opens.
3. Expand the root configuration group to display the Mobility Master configuration tree, then select the device with the license you want to delete. A list of non-sharable licenses used by that device appears below the Managed device Licenses table.
4. Select a license key from the list, and then click the delete icon to remove that license key.
5. Click **Apply**.
6. Click **Pending Changes**.
7. In the **Pending Changes** window, select the check box and click **Deploy changes**.

Using the CLI

To delete any license (sharable or non-sharable) via the command-line interface, access the Mobility Master (mm) configuration in enable mode, and then issue the command **license delete <key>**:

```
(host) [mm] #license delete lnZSpC2vkLMlJw8KVYdgj2
```