

## MMPSU-400-AC Module Kit

This document describes how to install a 400W AC Power Supply (MMPSU-400-AC) module into the Mobility Master hardware appliance.

### Package Contents

- MMPSU-400-AC Power Supply Module

### Installing a Power Supply Module



Use standard ESD precautions when installing a power supply module.

To replace the failed power supply module with a new power supply module:

1. Remove the failed power supply module. For more details, see [Removing a Power Supply Module](#).
2. Align the new power supply module with the opening in the appliance.
3. Slide the new power supply module into the appliance until the tab securely engages on to the appliance.
4. Insert the power cord in the AC connector on the power supply module.
5. Secure the AC power cord using the cable retention holder.

To replace the filler panel with a new power supply module:

1. Turn the screws on the filler panel counter-clockwise until loose (they cannot be removed completely).
2. Use the handle on the filler panel to pull it out.
3. Align the new power supply module with the opening in the appliance.
4. Slide the new power supply module into the appliance until the tab securely engages on to the appliance.
5. Insert the power cord in the AC connector on the power supply module.
6. Secure the AC power cord using the cable retention holder.

### Removing a Power Supply Module




Use standard ESD precautions when removing a power supply module.

To remove a power supply module from the Mobility Master hardware appliance:

1. Loosen the cable retention holder that is securely holding the AC power cord.
2. Remove the power cord from the AC connector on the power supply module.


3. Pull the tab on the power supply module towards the left and slide it out using the handle (see [Figure 1](#)).

**Figure 1** Removing a Power Supply Module

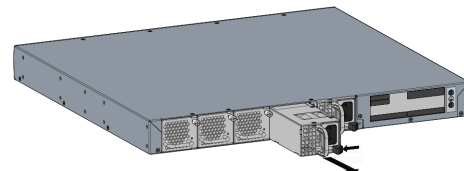

4. If you are not replacing the power supply module immediately, ensure to install a filler panel that was included with your Mobility Master hardware appliance. To install the filler panel:
  - a. Align the filler panel with the opening in the appliance.
  - b. Slide the filler panel into the appliance.
  - c. Turn the screws on the filler panel clockwise until tight to secure the filler panel into the appliance (see [Figure 2](#)).

**Figure 2** Installing a Filler Panel

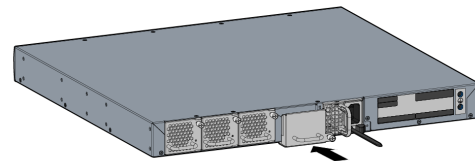

## Contacting Support

**Table 1** Contact Information

Main Site	<a href="http://www.arubanetworks.com">www.arubanetworks.com</a>
Support Site	<a href="https://support.arubanetworks.com">https://support.arubanetworks.com</a>
Airheads Social Forums and Knowledge Base	<a href="http://community.arubanetworks.com">community.arubanetworks.com</a>
North American Telephone	1-800-943-4526 (Toll Free) 1-408-754-1200
International Telephones	<a href="http://www.arubanetworks.com/support-services/contact-support/">http://www.arubanetworks.com/support-services/contact-support/</a>
Software Licensing Site	<a href="https://hpe.com/networking/support">https://hpe.com/networking/support</a>
End of Support information	<a href="http://www.arubanetworks.com/support-services/end-of-life-products/end-of-life-policy/">http://www.arubanetworks.com/support-services/end-of-life-products/end-of-life-policy/</a>

**Table 1** Contact Information

Security Incident Response Team (SIRT)	Site: <a href="http://www.arubanetworks.com/support-services/security-bulletins/">http://www.arubanetworks.com/support-services/security-bulletins/</a> Email: <a href="mailto:sirt@arubanetworks.com">sirt@arubanetworks.com</a>
--	--

## MMPSU-400-AC Module Kit Installation Guide

